

Remote Control

FOR 3 SPEED AC CEILING FAN

MODEL: RC-5T1

SKU: 050-02N



Read and Save These Instructions

⚠️ WARNINGS

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device complies with RSS-210 of Industry Canada. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna, Increase the separation between the equipment and receiver, Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. Note: Any changes or modifications to the transmitter or receiver not expressly approved by our Company may void one's authority to operate this remote control. Chemical burn hazard. Keep batteries away from children.

This remote uses a lithium button cell battery. If a new or used lithium button/coin cell battery is swallowed or enters the body, it can cause severe internal burns and can lead to death in as little as 2 hours. Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention. Dispose of cells properly and keep away from children. Even used cells may cause injury.

Installation



The Hunter Handheld Control requires an installed compatible receiver to function. Please follow the installation instructions included with the receiver prior to setting up your Handheld Control.

 
If you are installing multiple remote-controlled fans on the same circuit breaker,

you may need to perform a few extra steps to prevent interference or faulty operation of your remote controls.

For more information, please contact the customer service of the store you purchased, or mail to: support@ceilingfanremote.com.

1 Turning off the power

Before installation, use the pull chains to set the fan speed to **HIGH** and the light to **ON**. Ensure the power is **OFF** at the outlet box and wall switch location before proceeding with installation.

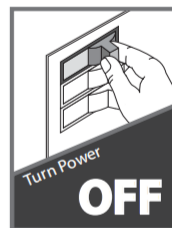

⚠️ WARNING

 


To avoid possible electrical shock, before installing your fan, disconnect the power by turning off the circuit breakers to the outlet box associated with the wall switch location.

2 Installing the battery


To access the battery compartment, remove the small Phillips head screw that secures the battery door to the remote control.

Replace the used battery with a CR2032 battery when necessary. The battery should be installed with the positive (+) side up.

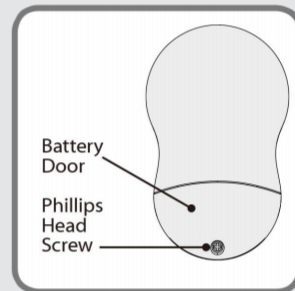

3 ⚠️ IMPORTANT

 Turning on the power

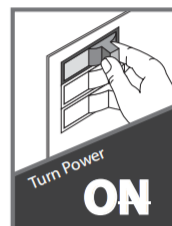

4 Pair the remote with a compatible receiver.


There are two ways to pair the remote control

How to Pair the Remote

Method 1:

Note: The remote must be paired before the fan will operate.

 Within 3 minutes of restoring power to the fan, press both the Fan Off button and the the HIGH button for at least 4 seconds. Your fan will turn on low to indicate successful syncing. If it does not, turn off power to your fan, wait 1 minute then try again. If using the transmitter with multiple fans, repeat this process for each fan.

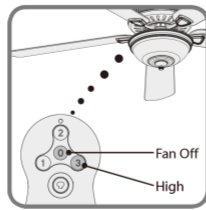

Method 2:

 
NOTE: To pair your remote, remove the battery door. Cycle power to the fan by turning power off and back on at the wall switch (or circuit breaker if necessary). Within 3 minutes, press the LEARN button on the remote.



To prevent faulty operation, please disconnect power from all other ceiling fans within range while pairing.

Using screws

To install the transmitter cradle, remove the two screws holding your switch cover plate. Do not remove the cover plate. Orient the cradle by lining up the two mounting holes with those on the cover plate. Insert and tighten the screws. Do not over tighten.

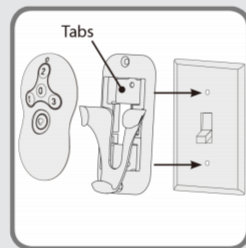

Note: For paddle-style switches, break off the tabs on the cradle by pushing outward.

Compatible

 
- Compatible with Hunter and Casablanca ceiling fans, as well as other brands.
- Replace Hunter remote 99813, 99392, 99770, 99123, 99122, 99119, 99118, 99198
- The frequency of this remote is 434MHz. If your ceiling fan is 3 Speed and works at the frequency 434MHz, then our remote can work for your ceiling fan.

If you are not sure if this remote can work for your ceiling fan, please purchase a complete kit with a receiver in the store.

Customer Service

- If you have problems installing or operating your fan, do not return this product to the dealer, please contact Replacement Remotes customer support of the store you purchased first, or mail to: **Support@ceilingfanremote.com**.
- Our website is: **www.ceilingfanremote.com**

Remote Functions

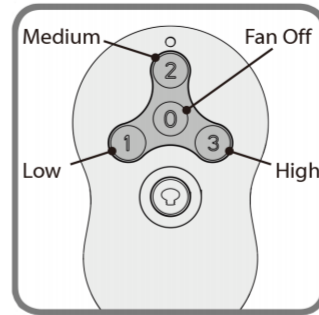


The Fan Off button only turns the fan off. To turn the fan on, press one of the fan speed buttons.

- | | |
|---|--|
| 3 | High |
| 2 | Medium |
| 1 | Low |
| 0 | Short press: Fan Off
Long press: Walk Away Time Delay |

The Safe-Exit Program gives you about thirty seconds of light when you turn the lights off to exit the room before the lights go out. To use Safe-Exit:

- Press the Fan Off button for at least three seconds to initiate the Safe-Exit Mode.
- The lights will flash for visual confirmation.
- The lights will stay on 50% brightness for 15 seconds and then begin to dim. After a total of 30 seconds, the lights will be completely off.

 Note: For CFL lighting, the lights will stay on 100% brightness for 30 seconds. After a total of 30 seconds, the lights will be completely off.

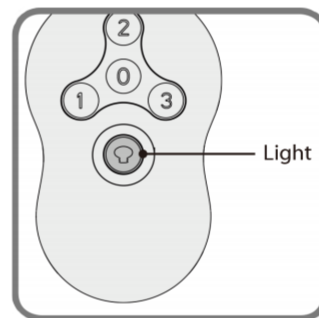

Quickly press the Light button to turn the lights off and on. Hold the Light button to raise and dim the light level.

Troubleshooting

Fan will not start

- Make sure the battery is working
- Make sure the power is on at the circuit breaker and the wall switch.
- Make sure that the transmitter and receiver are paired.

Remote control of fan is erratic

- Make sure the battery is installed correctly.
- Install a fresh battery.

Transmitter only works when held at close range

- Change battery.

Lights do not dim

- Check to see if a CFL bulb is installed. The control has a feature that automatically detects CFL bulbs and turns off dimming if a CFL bulb is installed.

CFL bulbs flicker

- Turn the light switch off and back on. Within three minutes, hold down the Fan Off button while pressing the Light button twice. If the problem is not corrected, repeat the process up to three times.