



Universal Wall Remote

GENERAL INFORMATION

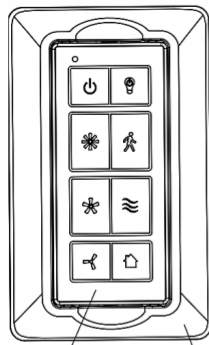

Remote Qty. 1
Wall Bracket Qty. 1

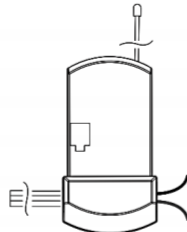

Receiver Qty. 1



 
Battery Qty. 2



Wire Connector Qty. 5



Mounting Screw Qty. 2

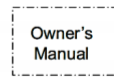

Owner's Manual Qty. 1

This remote controller is designed for 3-speed AC ceiling fan. If your ceiling fan is a DC 6-speed ceiling fan, it cannot be replaced.

INSTRUCTION OF INSTALLATION AND OPERATION

- Do not install in damp locations. For indoor use only.
- Do not use with fans that have integrated remote controls.
- Do not use with hugger-style fans.
- Be sure the outlet box is properly grounded or that a green or bare (ground) wire is present.
- This unit is intended to control a ceiling fan with electrical source of AC 110/120V, 60Hz.
- To reduce the risk of fire or electric shock, do NOT use a full-range dimmer switch to control the fan speed.

ASSEMBLY INSTRUCTIONS

⚠ DANGER: Failure to disconnect power supply prior to installation may result in serious injury or death.

1. Use existing pull chains on the desired fan to set fan speed to HIGH and to turn the light ON.
2. Turn off circuit breakers and wall switch to the fan.
3. Lower the canopy of the previously assembled fan and insert receiver into the mounting bracket with antenna end first and the flat side facing the ceiling.

4. CONNECT TO



Red receiver wire(AC IN L)..... Red supply wire

White receiver wire(AC IN N).....White supply wire

White receiver wire(TO MOTOR N).....White com(FAN/LIGHT N) wire

Black receiver wire(TO MOTOR L).....Black fan wire

Blue receiver wire(TO LIGHT L).....Blue light wire

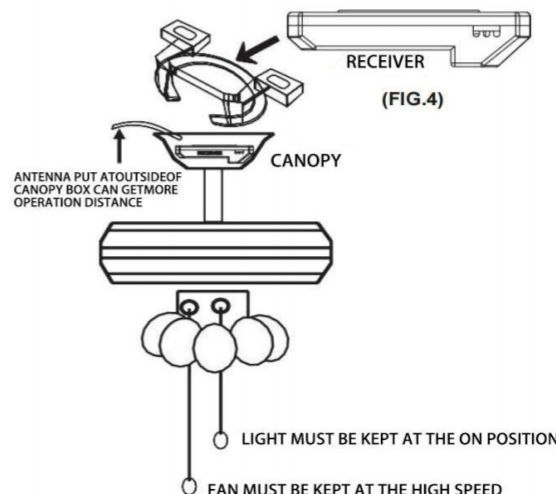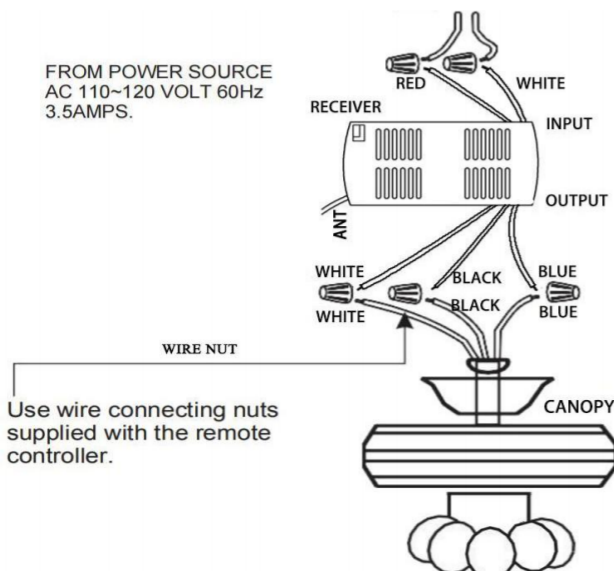

- Place a wire nut or electrical tape (not included) around each wire connection. Then push the receiver into the outlet box.
- Reinstall the canopy.
- Turn on the ceiling fan power supply. If there is a wall switch or pull chain switch, you need to adjust it to maximum fan speed and maximum brightness, otherwise the remote control will not work properly.
- Remove the battery cover from the back of the remote control using a fat-head screwdriver (not included). Install two CR2032 batteries into the remote control; make sure the positive side of the battery is facing up. Press the HIGH SPEED button to ensure the LED indicator illuminates and the fan turns on.
- If desired, the wall bracket can be attached to a wall using the mounting screws.

OPERATING INSTRUCTIONS

To operate the fan using the remote, make sure fan pull chain is on high and light is turned on.

Then press and release the following buttons:

Fan Off - Turns the power to fan of.

Light On/Off - Turns the light on and off. Press and hold to dim or brighten lights (for dimmable bulbs only).

High Speed - Turns on fan at high speed.

Light Delay - Light stays on for 60 seconds to allow for safe exit from room. **Note:** Tap Light Delay once to activate. Fan light blinks once to confirm Light Delay is active. Press any button to cancel.

Medium Speed - Turns on fan at medium speed.

Variable Breeze - Simulates a breeze in nature. Press and hold button to activate.

Press any fan speed button to cancel.


Low Speed - Turns on fan at low speed.

Home Shield - Simulates occupancy while away from home. Fan remains off and the light randomly turns on for a minimum of five times and a maximum of 20 minutes. The light remains off for 60 minutes between events. Press and hold button to activate. Light will blink twice to confirm Home Shield is active. Press any button to cancel.

LED indicator should illuminate when any remote button is pressed. If not, replace the DC3V, CR2032 batteries.

LEARN button - Syncs remote to receiver (see TROUBLESHOOTING for instructions).

Note: To access LEARN button, remove battery door from back of the remote using a fat-head screwdriver.

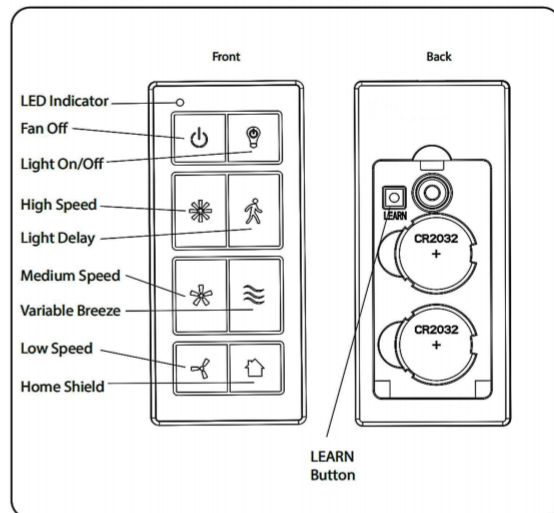


Link to App

Step 1:Download App

Download the Smart Life APP from App Store or Google Play on your smart device.



Or Scan the QR Code to Download.

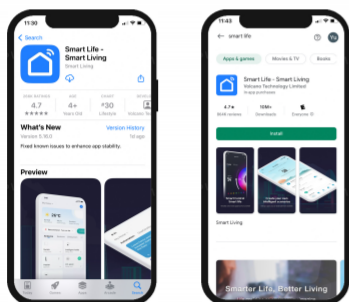

Step 2: Register

1 Register and Log in to Your Account.

2 Make sure that your Wi-Fi and Bluetooth are enabled when using the Smart Life APP.

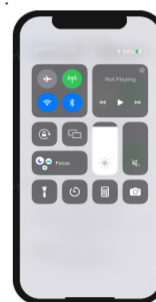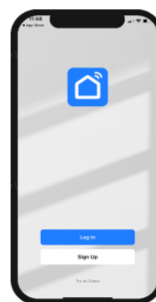


Step 3:Add Device

1 Select "Add Device" or Click the "+" in the Upper Right Corner.



2 Find the Fan Device, Click to "ADD" Keys.

Press

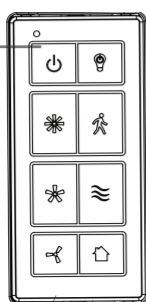


First, you need to reset the fan: turn off the fan power at the wall switch/ electrical box for 5 seconds and then turn it back on. Within 30 seconds of turning it on, press and hold the "Fan Off" button for 5 seconds to reset it. If the reset is successful, the indicator light will flash, and then follow the steps to add the device.


If the fan is turned on for more than 2 minutes, you will not be able to search for the device and need to repeat the above steps.

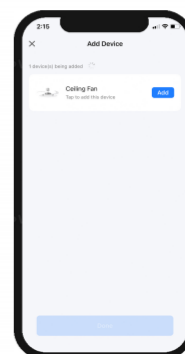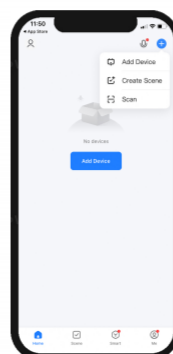


- 3 Connecting to the Internet, Click to "NEXT" Keys.
(Do not use 5G network for the first pairing.)

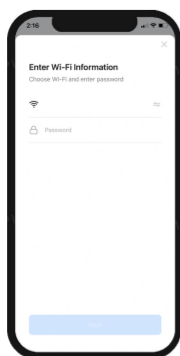


- 4 Waiting for Devices to Connect.

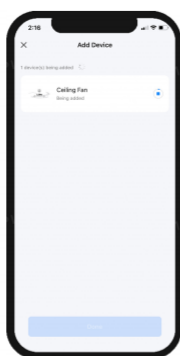

- 5 After you have edited and saved the product name, click "DONE" at the underneath right to complete setup.

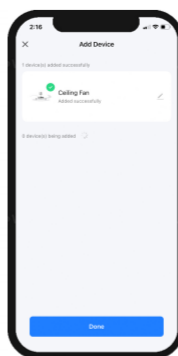


- 6 Device added successfully.

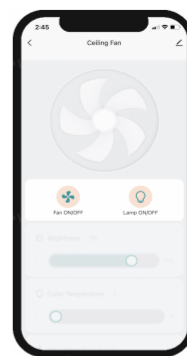

Link Skill to Alexa or Google Assistant

Alexa Setup Steps


- 1 In the "Me" in the lower right corner of the Smart Life APP, find Alexa

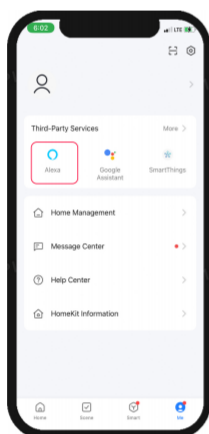

- 2 Click "Link to Amazon Alexa"





- 3 In the App, change the name of the device to an easily identifiable name such as bedroom light, bed room fan.

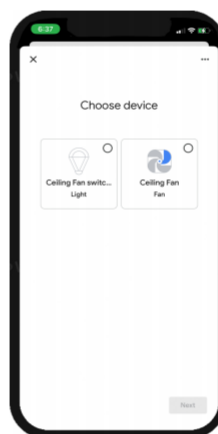

Common Voice Commands (amazon alexa)
"Alexa, turn on <device name>"
"Alexa, turn off <device name>"
"Alexa, set the <device name> to fifty percent."
"Alexa, set the <device name> to speed 1"

Google Assistant Setup Steps

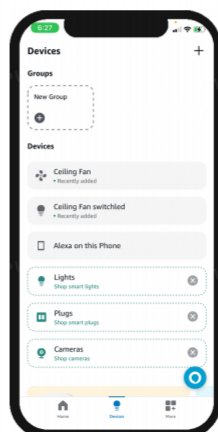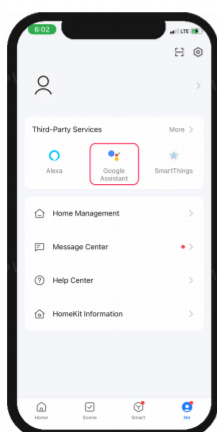

Common Voice Commands (Google Assistant)
"OK Google, turn on <device name>"
"OK Google, turn off <device name>"
"OK Google, set the <device name> to fifty percent."
"OK Google, set the <device name> to speed 1"

TROUBLESHOOTING

LED indicator on the remote illuminates, but the remote won't control the fan. The remote may need to be re-synced.

The remote is synced to the receiver at the factory. Occasionally, power surges can cause the remote to become un-synced. Whenever necessary, follow the syncing instructions below.

SYNCING INSTRUCTIONS: Switch the power to the fan off and back on again. Within 30 seconds, press and hold the HIGH SPEED and LOW SPEED buttons (or the "LEARN" button, located in the battery compartment) for 5 seconds. Fan will turn on at low speed and light off. This confirms the syncing process is successful.

The LED indicator on the remote does not illuminate.

The battery most likely needs to be replaced or it is not oriented correctly in the battery compartment. If battery is depleted rapidly, please replace the battery in a timely manner.

The LED indicator stays on.

Ensure one of buttons is not stuck in the down position.

Remote controls more than one fan.

Turn off the power to the fans you don't want synced. Follow the syncing instructions listed above. Then, turn on the power to the other fans

Dimming feature does not function.

Ensure the bulbs are incandescent or other dimmable bulbs

Fan will not run at high speed.

If your fan has manual pull chains to operate the fan speed, be sure the pull chain is manually set to HIGH SPEED. If your pull chain is set to LOW or MEDIUM SPEED, the remote will not override the manual pull chain setting.

Light will not turn on.

If you fan has manual pull chains, be sure the light pull chain is set to ON. The remote will not override the manual pull chain setting.

Can the receiver be connected by different accounts ?

NO. But it can be shared with different accounts.

If you need to connect it with another account, please delete the device from your mobile phone or reset the device.

Does it works with the fan which has PULL CHAINS SWITCH ?

YES.

If you have PULL CHAINS SWITCH, turn PULL CHAINS SWITCH to max speed position and light on. Only in this way you can get correct speed and functions.

Warranty Policy

1 year warranty and free 1 month replacement (non-human damage). For more information, please contact the customer service of the store you purchased, or mail to: **support@ceilingfanremote.com**.