 


Wall Remote Control

GENERAL INFORMATION

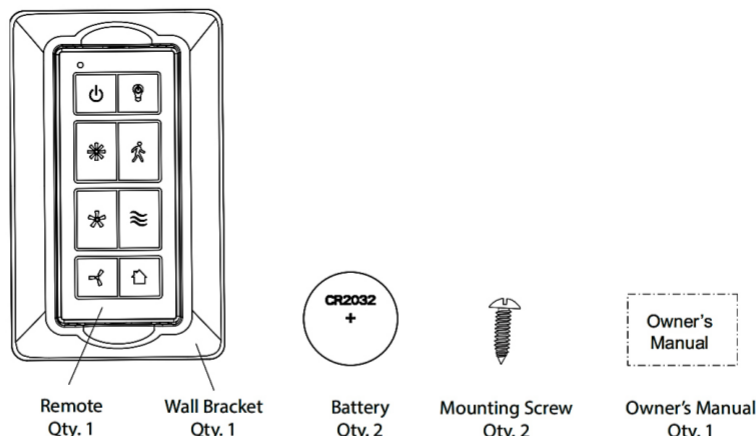

This remote controller is designed for 3-speed AC ceiling fan. If your ceiling fan is a DC 6-speed ceiling fan, it cannot be replaced.

OPERATING INSTRUCTIONS

To operate the fan using the remote, make sure fan pull chain is on high and light is turned on.

Then press and release the following buttons:

Fan Off - Turns the power to fan of.

Light On/Off - Turns the light on and off. Press and hold to dim or brighten lights (for dimmable bulbs only).

High Speed - Turns on fan at high speed.

Light Delay - Light stays on for 60 seconds to allow for safe exit from room. **Note:** Tap Light Delay once to activate. Fan light blinks once to confirm Light Delay is active. Press any button to cancel.

Medium Speed - Turns on fan at medium speed.

Variable Breeze - Simulates a breeze in nature. Press and hold button to activate. Press any fan speed button to cancel.

 
 
Low Speed - Turns on fan at low speed.

Home Shield - Simulates occupancy while away from home. Fan remains on and the light randomly turns on for a minimum of five times and a maximum of 20 minutes. The light remains on for 60 minutes between events. Press and hold button to activate. Light will blink twice to confirm Home Shield is active. Press any button to cancel.


LED indicator should illuminate when any remote button is pressed. If not, replace the DC3V, CR2032 batteries.

LEARN button - Syncs remote to receiver (see TROUBLESHOOTING for instructions).

Note: To access LEARN button, remove battery door from back of the remote using a fat-head screwdriver.

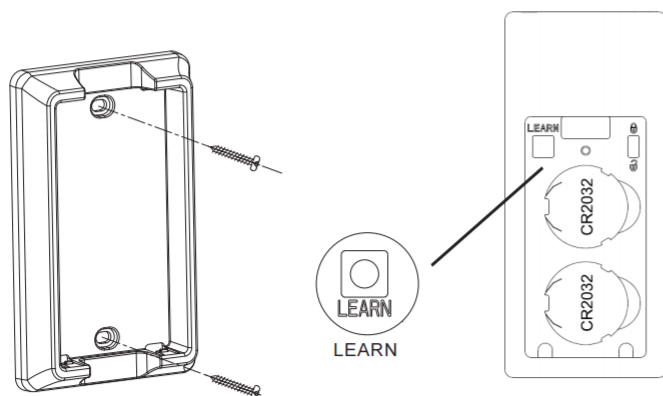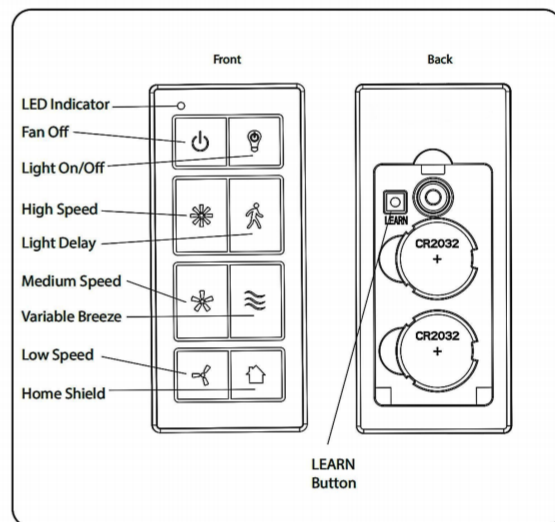

 Mount the transmitter holder onto the wall using screws provided. Place the transmitter into the holder.

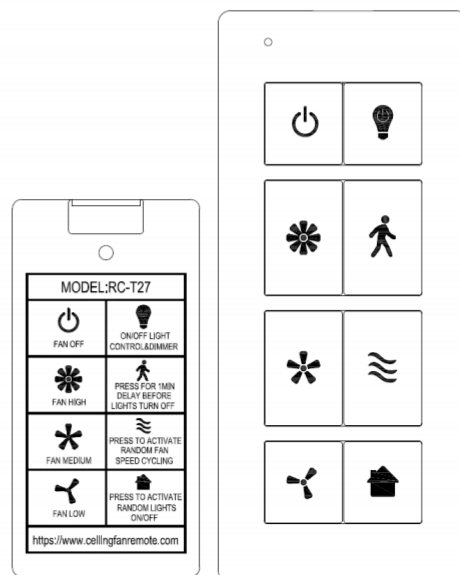

TROUBLESHOOTING

LED indicator on the remote illuminates, but the remote won't control the fan. The remote may need to be re-synced.

SYNCING INSTRUCTIONS: Switch the power to the fan off and back on again. Within 30 seconds, press and hold the HIGH SPEED and LOW SPEED buttons (or the "LEARN" button, located in the battery compartment) for 5 seconds. Fan will turn on at low speed and light off. This confirms the syncing process is successful.

The LED indicator on the remote does not illuminate.

The battery most likely needs to be replaced or it is not oriented correctly in the battery compartment. If battery is depleted rapidly, please replace the battery in a timely manner.

The LED indicator stays on.

Ensure one of buttons is not stuck in the down position.

Remote controls more than one fan.

Turn off the power to the fans you don't want synced. Follow the syncing instructions listed above. Then, turn on the power to the other fans

Dimming feature does not function.

Ensure the bulbs are incandescent or other dimmable bulbs

Fan will not run at high speed.

If your fan has manual pull chains to operate the fan speed, be sure the pull chain is manually set to HIGH SPEED. If your pull chain is set to LOW or MEDIUM SPEED, the remote will not override the manual pull chain setting.

Light will not turn on.

If you fan has manual pull chains, be sure the light pull chain is set to ON. The remote will not override the manual pull chain setting.

Can the receiver be connected by different accounts ?

NO. But it can be shared with different accounts.

If you need to connect it with another account, please delete the device from your mobile phone or reset the device.

Does it works with the fan which has PULL CHAINS SWITCH ?

YES.

If you have PULL CHAINS SWITCH, turn PULL CHAINS SWITCH to max speed position and light on. Only in this way you can get correct speed and functions.

Warranty Policy

1 year warranty and free 1 month replacement (non-human damage). For more information, please contact the customer service of the store you purchased, or mail to: **support@ceilingfanremote.com**.