

Ceiling Fan Remote Control Operation Instruction

SETTING THE OPERATING CONTROLS (FIRST TIME ONLY):

1. This unit operates on two 1.5V AAA batteries (not included).
2. Store the controller unit away from excess heat or humidity.
3. The remote control adopts RF wireless digit emission technique.
4. **How to pair our remote to your exist receiver ?**

Turn off the fan power and then restore it, press the **Learn Key** or press and hold the "**fan stop**" button for 5 seconds, within 60 seconds after you restore the power, the fan will automatic turn on at low speed and then turn off, with the light flashing 3 times.

(NOTE: The pairing process is not accepted after 60 seconds when you restore supply power)

5. Please note the transmitter can pair with multiple receivers. When the transmitter does not control the receiver, please check if any similar remote controls are working nearby, disconnect them and then proceed with pairing process again.
6. If your ceiling fan is equipped with variable speed and light ON/OFF pull chain switch control, make sure to set the speed control at the **HIGHEST** speed and the light to the **ON** or **BRIGHTEST** position before installing the remote control. This will avoid erratic speeds and possible damage to your ceiling fan.
7. Operation buttons on the panel of the transmitter:

(1) Fan speed:


-  = High speed
-  = Medium-high speed
-  = Medium speed
-  = Low speed

(2) - On/Off Button: Turn the fan off

(3) - Light On/Off - press and release light button.

 - Light Dimmer - continusly press the light button to brighten the light.

 - Light Dimmer - continuously press the light button to dim the light.

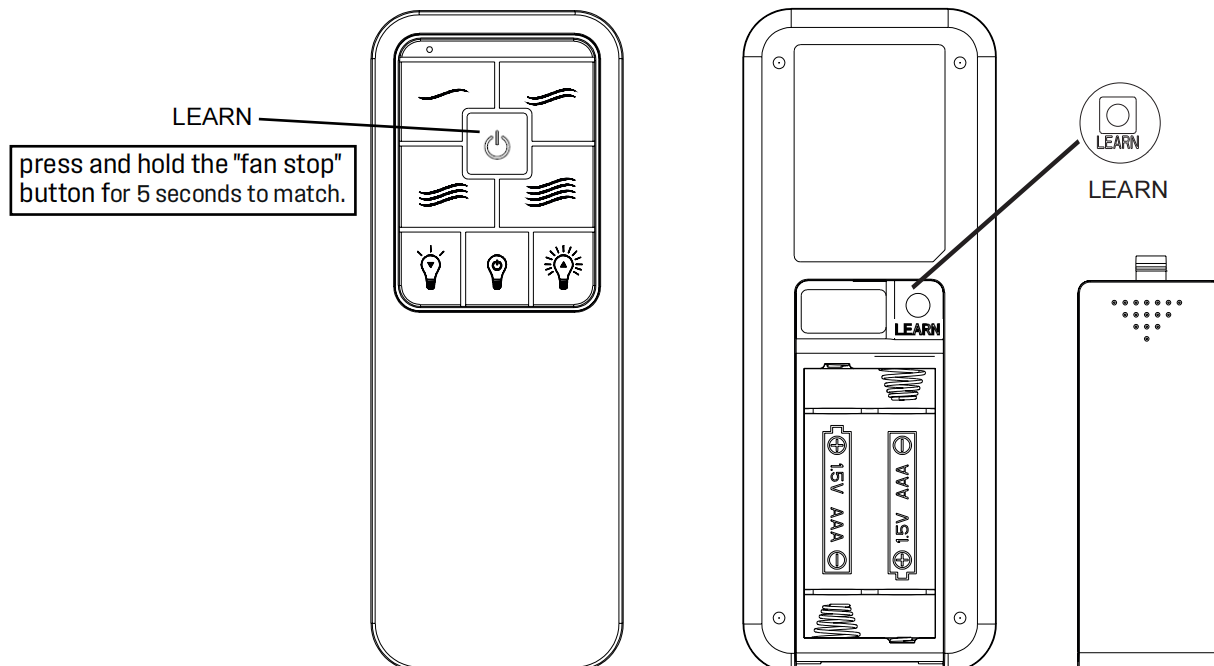

Warranty policy:

One year free warranty(non-human damage).

For help, please contact Replacement Remotes customer support of the store you purchased,or mail to:

Support@ceilingfanremote.com