

DC POWER CEILING FAN REMOTE CONTROL MANUAL

LEARNING PROCESS

NOTE: The Hand Held Remote Control is equipped with a learning ID function which has code combinations to prevent potential interference from other remote units.

Step: 1. Install the batteries AAA 1.5V*2 PCS in transmitter. Within 30 seconds of turning the

Receive power ON, press the transmitter  button

Step: 2. Hold  button about 5 seconds, once the receiver has detected the ID, the light of ceiling fan will be blinking twice. This will indicate the receiver has learned the ID that was previously selected on the transmitter.


Note: After the power is on, do not press any other buttons on the transmitter before learning ok. Because doing so will cause the procedure to fail.

After completing the steps above, you should be able to operate the ceiling fan and light. If the ceiling fan is not responding to the transmitter, please turn the power off to the receiver and repeat step 1 and 2.

Remove the batteries if not used for long periods of time to prevent damage to the hand held remote. The batteries must be removed from the transmitter before it is scrapped and the batteries shall be disposed of safety.

Light function select switch:

Slide the D/O switch, located in the battery compartment, to match the bulb type in your fan. "D"(DIMMER) for incandescent bulbs and "O"(ON/OFF) indicates compact fluorescent bulbs (CFL). Use a small screwdriver or ballpoint pen to slide firmly left or right.

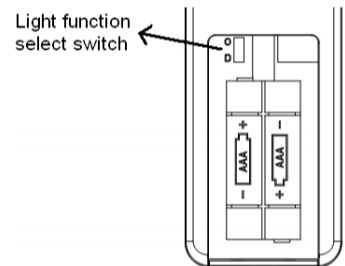

FUNCTIONS OF TRANSMITTER

1.  : Turn on/off ceiling fan

2. FAN SPEED

Press  button to increase speed and LED bar will show at same time. All LED is brighten for the highest speed. Press  button to decrease speed.

3. FAN TIMER



Setting up that the ceiling fan and light will turn off after 2, 4 or 8 hours automatically.

4.  : For setting natural wind that the fan speeds turn and change at random. It's three modes for choose.

5.    : Press this button for forward/reverse airflow of ceiling fan.


6. LIGHT :



— Press this and release instantly to turn on or off the light.



— Press and hold to dim or brighten lights to the desired level and release. (Tungsten bulb only and light O/D switch at D position).

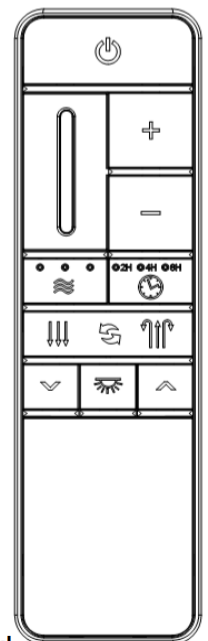

Checking Remote Compatibility:

- Locate the FCC ID or Model on the original remote. It's usually engraved or labeled on the back and should read FCC ID: **** or Model **** . Compatibility requires it to state **CHQ7225T, UC7225T, TR198A, or KUJCE10308**. If it differs, it's not compatible. If it says TR198B then this remote will work but the buttons are labeled incorrectly for light functions.
- If the original remote isn't available, locate the Model number of the receiver unit atop the fan motor, usually under a plate above the blades. Turn off the fan's power, unscrew the plate, and find the model number on the C or U-shaped receiver.
- **Note:** The fan receiver could also be up in the canopy next to the ceiling or under the motor where the light should be.
- Once you have this number, please contact our customer service: support@ceilingfanremote.com for help.

If you have multiple fans that require the same remote.

Inside the battery compartment there is a switch "0" / "1". Set the dip switch to "1" and then follow the normal pairing instructions above.

Warranty policy:

One year free warranty(non-human damage).

For help, please contact Replacement Remotes customer support of the store you purchased, or mail to: Support@ceilingfanremote.com