


Ceiling Fan Remote Control Operation Instruction

OPERATING INSTRUCTIONS

1. REMOTE FUNCTIONS

Key Press	Function
💡 + Quick Press	Light On/Off
💡 + Long Press	Light Dimming
⚙️ + Quick Press	Fan On/Off
△ + Quick Press	Raise Fan Speed
▽ + Quick Press	Lower Fan Speed
Long Press △	Fan High
Long Press ▽	Fan Low
Long Press ▽ + △	Dimming Mode On/Off
⚙️ + Long Press	Fan Reverse
Long Press ⚙️ + △	Fan Updraft
Long Press ⚙️ + ▽	Fan Downdraft

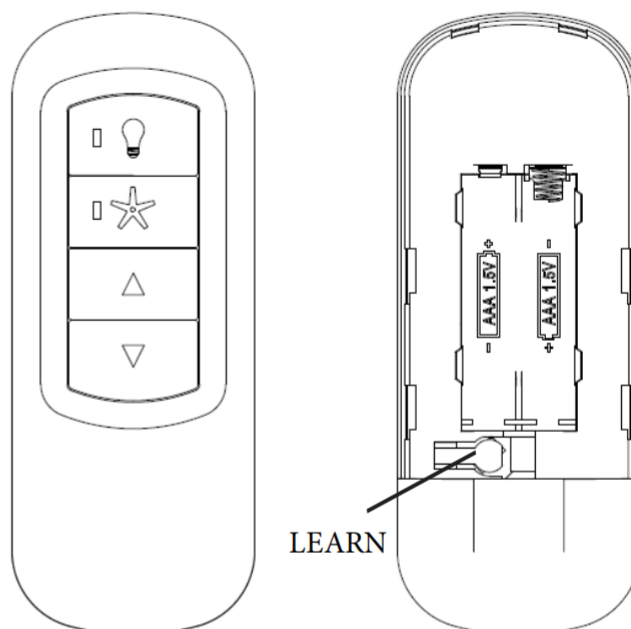


2. EFFORTLESS PAIRING

- Install the battery(3A 1.5V)
- Turn the fan's power off with a wall switch of circuit breaker.
- Keep it off for at least 10 seconds.Turn the power back on using the wall switch or circuit breaker.
- Tap the LEARN key on the back of the transmitter. Quick Press LEARN key .

3. Install the Handheld Control Cradle Bracket

If desired, the wall bracket can be attached to a wall using the mounting screws. Slide small plate over mounting screws, then rest the remote in the wall bracket for easy storage.

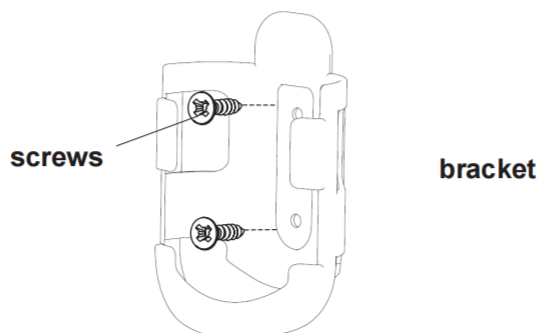

Warranty policy:

One year free warranty (non-human damage).

For help, please contact Replacement Remotes customer support of the store you purchased, or mail to:

Support@ceilingfanremote.com