


CEILING FAN REMOTE CONTROL

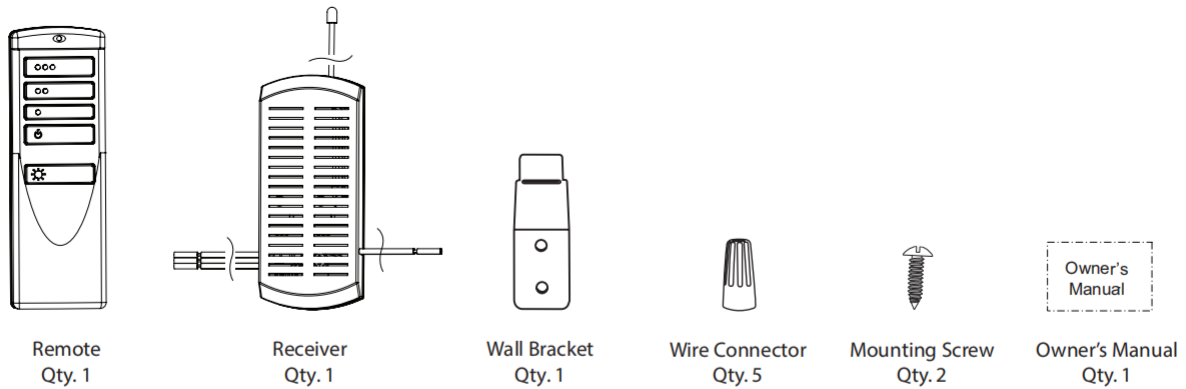

SAFETY INSTRUCTIONS

Read instructions completely before installing the remote.


⚠ WARNING: If the color of the household supply wires is different than what is referred to in the instructions below, a professional electrician should determine proper wiring.

CAUTION:

- Do not install in damp locations. For indoor use only.
 - Do not use with fans that have integrated remote controls.
 - Be sure the outlet box is properly grounded or that a green or bare (ground) wire is present.
 - This unit is intended to control a ceiling fan with electrical source of AC 110/120V, 60Hz.
 - To reduce the risk of fire or electric shock, do NOT use a full-range dimmer switch to control the fan speed.
 - This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
- Consult the dealer or an experienced radio/TV technician for help. Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment.


ASSEMBLY INSTRUCTIONS

1. Use existing pull chains on the desired fan to set fan speed to HIGH and to turn the light ON.

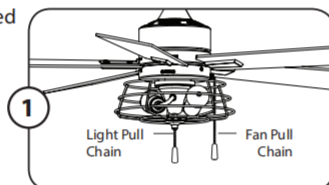


2. Turn off circuit breakers and wall switch to the fan.


⚠ DANGER: Failure to disconnect power supply prior to installation may result in serious injury or death.

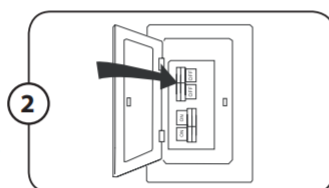


3. Lower the canopy of the previously assembled fan and insert receiver. **Note:** If installing this product with a new fan, insert the receiver in the mounting bracket before wiring the fan; wire the fan according to these instructions, then continue fan assembly as directed in the fan's instruction manual.

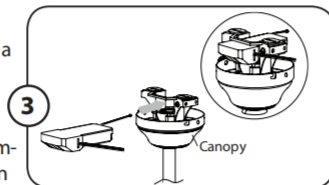


4. Disconnect existing wire connections, then secure all wire connections with wire connectors according to diagram and these steps:
- Connect the Blue wire of receiver to the Blue fan wire.
 - Connect the Black wire of receiver to the black fan wire.
 - Connect the White wire of receiver to the White fan wire.
 - Connect the Red wire of receiver to the Black(hot/power) supply wire.
 - Connect the White wire of receiver to the White (neutral) supply wire.

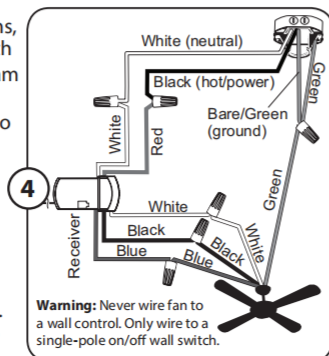


5. Wrap electrical tape (not included) around each wire connector down to the wire. Then, push wire connections into the outlet box. Place the White wire connections on the opposite side of the outlet box from the Black and Blue wire connections.

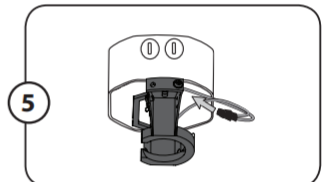


6. Reinstall the canopy.

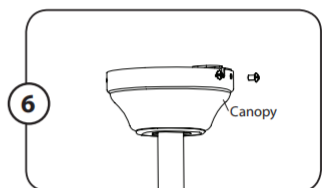


7. Turn on power supply and wall switch to the fan.

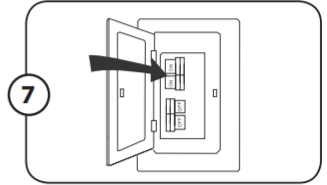

8. Remove the battery cover from the back of the remote and install the A23 12-volt battery. Replace the battery cover and press the HIGH button to ensure the LED indicator illuminates and the fan turns on.

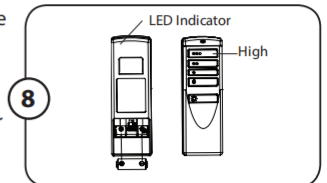


9. If desired, the wall bracket can be attached to a wall using the mounting screws.

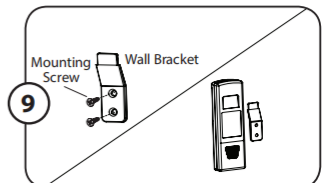

OPERATING INSTRUCTIONS

To operate the fan using the remote, press and release the following buttons:

- 1 - High fan speed
- 2 - Medium fan speed
- 3 - Low fan speed
- 4 - Fan Power: Turns the fan off.
Light Delay Off Mode - Press and hold the fan power button (4) for five seconds, which will turn off light after one minute. The LED indicator on the remote will flash four times to confirm mode setting.
- 5 - Light Control: *Dimmable Bulbs* - Tap button to turn lights off and on. Press and hold button to dim or brighten the lights.
Non-dimmable bulbs - Turns lights on and off. **Note:** The dimmer function does not work with non-dimmable bulbs.
- 6 - D/CFL Switch: Switch should be set to "CFL" to correspond with standard non-dimmable bulbs; set to "D" for incandescent and other dimmable bulbs.
Learn - Syncs remote control to receiver. The remote was synced at the factory. Should it become necessary to re-sync the remote, turn off the main power, then turn it back on. Within 30 seconds, use a small screwdriver to press and hold the learn button on the remote for 3 seconds. The fan will turn on and light (if applicable) will blink three times, signaling a successful synchronization.

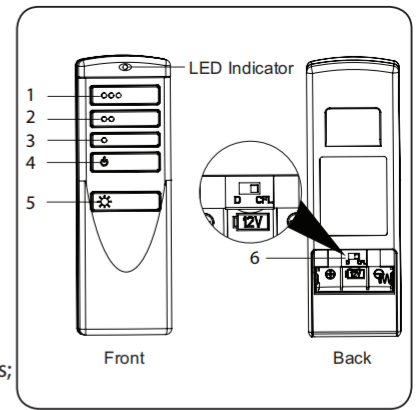

TROUBLESHOOTING

WARNING: Ensure the power is turned off to the fan/remote before performing any maintenance.

LED indicator on the remote illuminates, but the remote won't control the fan. The remote may need to be re-synced.

The remote is synced to the receiver at the factory. Occasionally, power surges can cause the remote to become un-synced. Whenever necessary, follow the syncing instructions below.

SYNCING INSTRUCTIONS: Turn off the main power, then turn it back on. Within 30 seconds, press and hold the high and low speed buttons on the remote at the same time for 5 seconds. The LED indicator will flash 3 times, signaling a successful synchronization. Once complete, the fan will start on the low speed with the light (if applicable) off.

The LED indicator on the remote does not illuminate.

The battery most likely needs to be replaced or it is not oriented correctly in the battery compartment. If battery is depleted rapidly, ensure one of buttons is not stuck in the down position.

The LED indicator stays on.

Ensure one of buttons is not stuck in the down position.

Remote controls more than one fan.

Turn off the power to the fans you don't want synced. Follow the syncing instructions listed above. Then, turn on the power to the other fans.

Dimming feature does not function.

Ensure the "D/CFL" button in the battery compartment is set to the "D" position and the bulbs are incandescent or other dimmable bulbs.

Fan will not run at high speed.

If your fan has manual pull chains to operate the fan speed, be sure the pull chain is manually set to HIGH SPEED. If your pull chain is set to LOW or MEDIUM SPEED, the remote will not override the manual pull chain setting.

Light will not turn on.

If your fan has manual pull chains, be sure the light pull chain is set to ON. The remote will not override the manual pull chain setting.

1-YEAR LIMITED WARRANTY

One year free warranty (non-human damage).

For help, please contact Replacement Remotes customer support of the store you purchased, or mail to:

Support@ceilingfanremote.com.