

CEILING FAN REMOTE CONTROLLER OPERATION AND INSTALLATION INSTRUCTIONS


(Please keep this instruction pamphlet.)

IMPORTANT

YOU MUST SET CEILING FAN MANUAL SWITCH TO HIGH SPEED AND LIGHT KIT (IF ANY) TO ON POSITION BEFORE OPERATING REMOTE CONTROL.

LEARNING PROCESS

1. This unit finished learning process inside manufactory, if replace transmitter or receiver, user need to redo learning process before using this unit.
2. Install the battery 12V (not included) in transmitter.
3. After installing the unit and power on and press ① or LEARN key 1~3 seconds, lights will be flashing twice and turn off, which indicate that learning process finished. Learning effect distance is same with remote's. Please note that must press the "0" or "LEARN" button within 30 seconds after power on.
4. Please note that the transmitter can learn in multiple receiver, when doing learning process please make sure not learn in other receiver. Suggest to separate power switches of fans in 2 meter range.

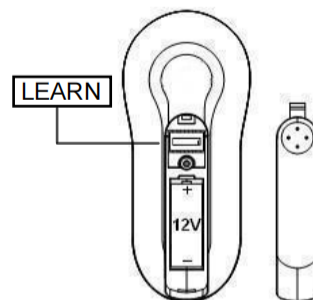

FUNCTIONS OF TRANSMITTER

⓪ : ON/OFF - Press and release immediately to turn on or off the light.


DIMMER - Press and hold over 5 seconds to dim or brighten light to the desired level and release.

① : Turn off the ceiling fan.

③ : Turn on the fan at high speed

② : Turn on the fan at medium speed

① : Turn on the fan at low speed

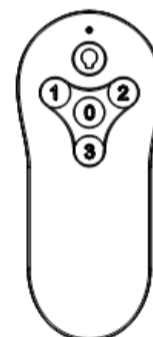

RC-93T

Installation of
Transmitter Wall Mount
Holder with two
screws.



NOTE:

The frequency of this remote is 304.25MHz.

It can replace the FCC ID/MODEL as below:

2BB78-ITL-F304, KUJCE10311/TR214A, KUJCE10712/TR214B, 2AQZU-18018/TR214D, A25-FA0138, KUJCE10610

Warranty policy:

One year free warranty(non-human damage).

For help, please contact Replacement Remotes customer support of the store you purchased, or mail to:

Support@ceilingfanremote.com

Our website is: www.ceilingfanremote.com