

Ceiling Fan Remote Control Operation Instruction

OPERATING INSTRUCTIONS

- To operate the fan using the remote (A), press and release the following buttons:

High - Turns fan on high speed.

Medium - Turns fan on medium speed.

Low - Turns fan on low speed.

Fan Off - Short press for turns fan off, **LONG PRESS** for **PAIR FUNCTION**.

Walk Away Light DelayTM - Tap delay button once to turn fan light off after 1 minute. Note: Light blinks to confirm that Walk Away Light Delay is active. Press any other button to cancel.


Light Control

Incandescent Bulbs - Press to turn lights off and on. Press and hold light control to dim or brighten the lights. CFL - Turns the lights on and off. Note: The dimmer function does not work with CFL.

Home ShieldTM - Press and hold Light Control and Delay buttons for 3 seconds. Lights cycle on for 5-20 minutes and off for 60 minutes, simulating occupancy. Cycle repeats continuously until any other button is pushed to discontinue Home Shield mode.

D/O - Switch should be set to "O" for CFLs, which disables the dimming function. Flip to "D" for incandescent and other dimmable bulbs.

Learn - Syncs remote control to receiver. The remote was synced at the factory. Should it become necessary to re-sync the remote, turn off the main power, then turn it back on. Within 30 seconds, use a small screwdriver to press and hold the learn button or "o" key on the remote for 3 seconds. The fan will turn on and light (if applicable) will blink three times, signaling a successful synchronization.

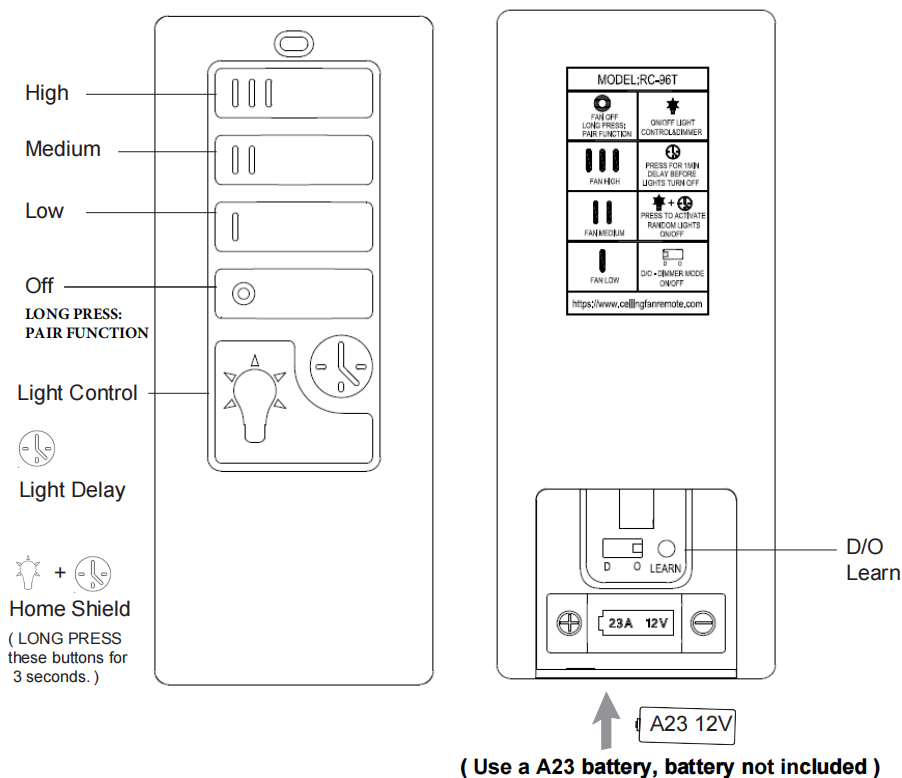

- If desired, the wall bracket can be attached to a wall using the mounting screws. Slide small plate over mounting screws, then rest the remote in the wall bracket for easy storage.

