

Ceiling Fan Remote Control User Guide

Product Features

The ceiling fan remote control is for use with three-speed ceiling fans. This remote is not universal and can only pair with supported ceiling fans that require the A25-TX015 remote control. The RC-97T remote control enables easy setup on your existing ceiling fan and supports both dimmable and non-dimmable light bulbs. The ceiling fan remote control features also include adjusting the ceiling fan's speeds, light dimming, light delay-off, and fan forward and reverse.

ATTENTION: Must not use with undimmable loading (e.g., CFL) when the transmitter is in D (incandescent dimming) mode. It will substantially shorten the CFL's working life, potentially even damaging the controller.

WARNING: Please confirm your original remote reads A25-TX015, this remote does not replace any "KUJCE..." or "TR" models. Check the FCC ID number on the back of your original remote.

Pairing Instructions

1. Install a 12V battery (not included) into the transmitter, matching polarity.
2. Cycle the power to the fan using either the wall switch or the circuit breaker box, and within 30 seconds of restoring the power to the fan,
3. Press and hold the " HI " and " LOW " buttons for 5 seconds, or tap the "LEARN" key on the back of the transmitter.

Indication of successful pairing: the fan will turn to LOW speed, and incandescent/CFL is OFF.

If the fan does not respond, try pressing the keys on the remote to see if it will operate. If not, try repeating the steps above.

Operating the remote

See the below key function descriptions. Please review the images below.

High - Turns fan on high speed.

Medium - Turns fan on medium speed.

Low - Turns fan on low speed.

Fan Off - Short press for turns fan off.

Light Control - Press and release immediately to turn ON/OFF the light; Press and hold to achieve the dimming function.

Walk Away Light Delay - Pressing this enters the light delay-off mode; press the light On/Off key to exit.

Season slide switch

Slide the switch depending on the direction you wish the air to flow. Note: Wait for the fan to stop before reversing the switch.


● In warmer weather, counterclockwise rotation creates a downward airflow, which cools the air—slide switch to the left, indicated by the ↓ ↓ ↓ icon.

● In cooler weather, the clockwise rotation of hot air from the ceiling into the room. Slide the switch right, indicated by the ↶ ↑ ↷ icon.

D/O SWITCH


Slide the switch on the back of the transmitter depending on the light bulbs installed. You have the option of dimmable or non-dimmable light bulbs:

- For Dimmable bulbs, such as dimmable LED and Incandescent: Set the switch to the left, labeled with the "D" marking.
 - For non-dimmable bulbs, such as CFL bulbs: Set the switch to the right, labeled with the "O" marking
- this will disable the remote from dimming capabilities

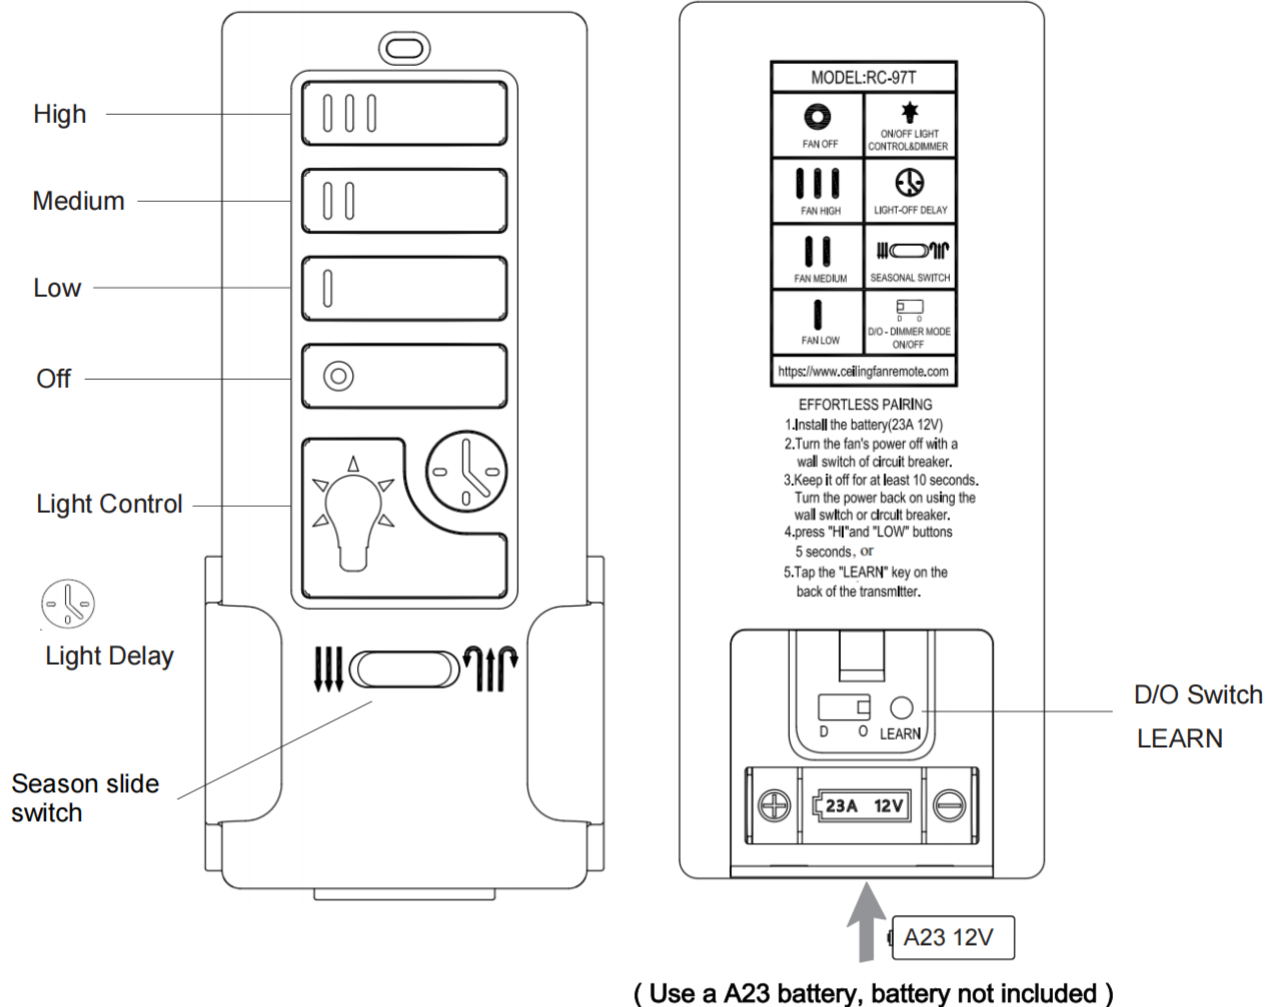

Installing the wall mount bracket

If desired, the wall bracket can be attached to a wall using the mounting screws, rest the remote in the wall bracket for easy storage.

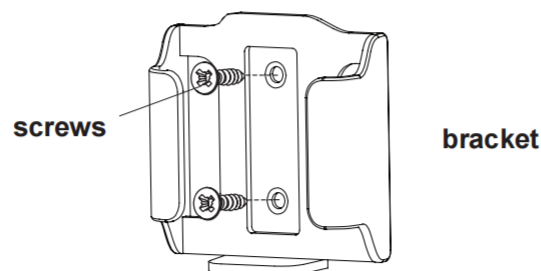

Warranty policy:

One year free warranty (non-human damage).

For help, please contact remotes control customer support of the store you purchased, or mail to:

Support@ceilingfanremote.com