

GENERAL INFORMATION

This wall control is designed to separately control your ceiling fan speed and light brightness.

There are four buttons (Hi, Med, Low, Fan Off) to control the fan speed and one button (Light) to control the light.

The ON/OFF switch is to turn the power to wall control On or Off. The blue indicator on the transmitter will light when any button is pressed.

This wall remote control JUST can compatible with HUNTER ceiling fan. The frequency is 434MHz. You can use it with Hunter's remote control and receiver.

INSTALLATION AND OPERATING INSTRUCTIONS

I. SAFETY PRECAUTIONS

- A. ⚠ DANGER: HIGH VOLTAGE!** Household electrical power can cause serious injury or death. Disconnect source of electrical power to the ceiling fan by removing fuse or switching off circuit breaker. Make sure all electrical connections comply with local codes, or the distance National Electrical Code, and ANSI/NFPA 70-1999. If you are unfamiliar with electrical wiring, please use a qualified and licensed electrician.
- B. ⚠ WARNING:** To reduce the risk of fire, electrical shock, or personal injury, wire connectors provided with the remote control receiver are designed to accept only one 12 gauge house wire and no more than two lead wires from the receiver. If your house wire is larger than 12 gauge or there is more than one house wire to connect to the two receiver wires, consult an electrician for the proper size wire connectors to use.
- C. ⚠ CAUTION:** TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT USE THE FAN WITH ANY SOLID STATE SPEED CONTROL DEVICE OR CONTROL FAN SPEED WITH A FULL RANGE DIMMER SWITCH.
- D.** Do not use this wall control with solid state ceiling fans.
 Electrical source and fan must be 115/120 volts, 60 Hz.
 Maximum fan motor amps: 1.0; Maximum light watts: 180 incandescent only.

II. INSTALLATION WALL REMOTE CONTROL

- A. Manually set fan speed control to HIGH via pull chain and set light to ON via pull chain.**

IMPORTANT: Fan speed and light control will not be activated by wall control if pull chains for fan and light are not set to the HIGH and ON positions, respectively.

- B.** Disconnect source of electrical power to the ceiling fan by removing fuse or switching off circuit breaker.

- C.** Install the remote control according to the following diagram.

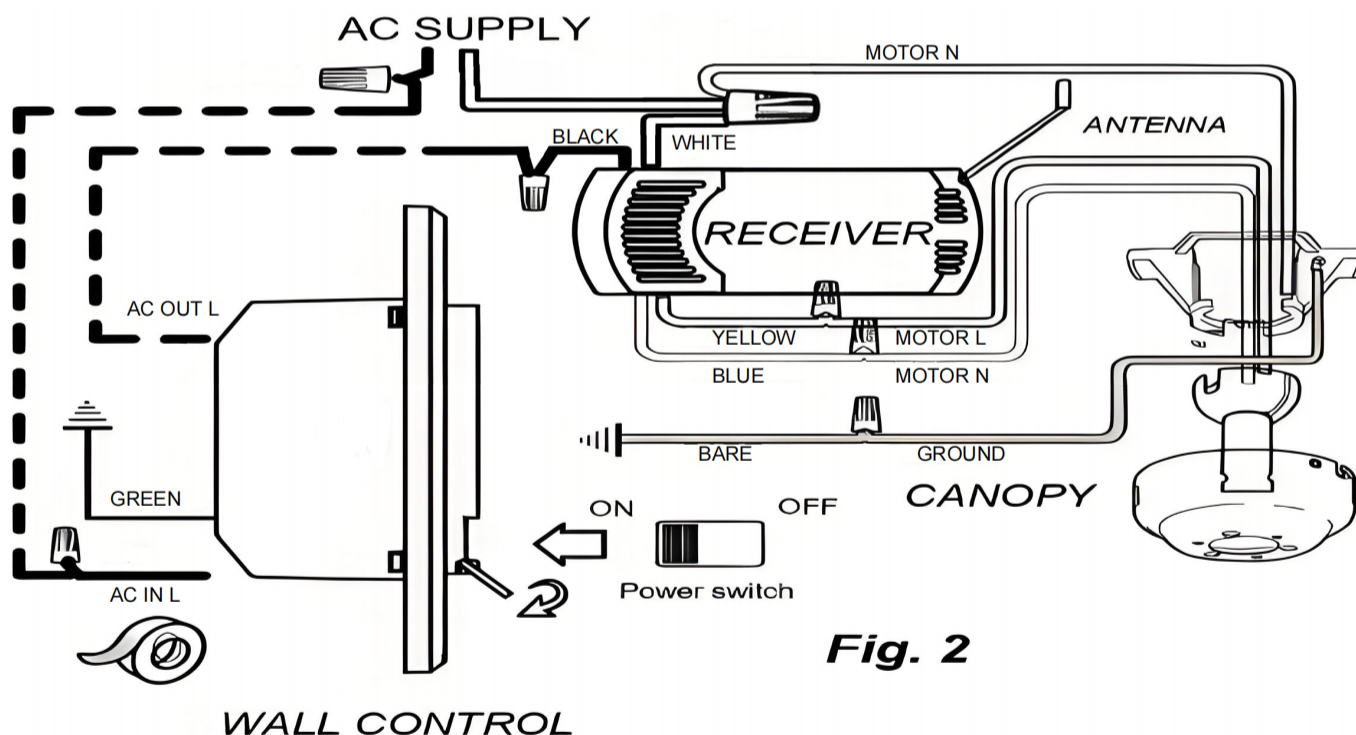


Fig. 2

III. MATCH THE WALL CONTROL (TRANSMITTER) TO YOUR EXIST RECEIVER

The Learn Key must be pressed with in 3 minutes, after pressing the Power button.

Keep pressing the button LEARN key in excess of 5 second it becomes a LEARN status. (Figure 4)

NOTE: Compact fluorescent bulbs are NOT compatible for use with dimmer controls.

IV. INSTALLING WALL CONTROL

Remove wall plate, disconnect and remove the toggle switch from wall outlet box. Using the wire connectors provided, make the electrical connections to the wall control as shown in Figure 2.

Wrap each wire connector separately with electrical tape as an extra safety measure.

Carefully push all connected wires back inside wall outlet box.

Secure wall control with 2 screws provided.

Attach wall plate cover with the 2 original screws.

V. WALL CONTROL --- CARE AND OPERATION

Operation buttons on the front panel of the wall control:

- △ Long press for fan high speed
- ▽ Long press for fan low speed
- ⌘ FAN OFF button for fan speed off
- 💡 LIGHT button for light brightness and off

The light button has auto resume,
so the light will stay at the same brightness as the last time it was turned off.

IMPORTANT: Make sure that fan has been turned off at wall switch and then allow blades to come to a complete stop before manually activating the reverse switch on the fan.

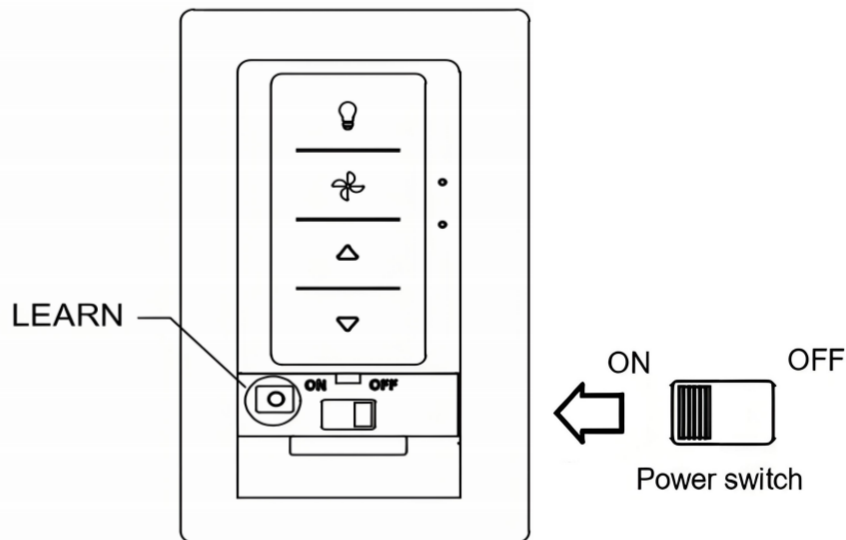


Fig. 4 WALL CONTROL
FRONT PANEL

CAUTION:

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT
USE THE FAN WITH ANY SOLID STATE SPEED CONTROL DEVICE
OR CONTROL FAN SPEED WITH A FULL RANGE DIMMER SWITCH.

VI. TROUBLESHOOTING GUIDE

Fails to operate:

1. Power to the receiver?
2. Receiver wired correctly?
3. Manual speed control on fan in highest position?
4. Light kit switch turned on?
5. Make sure the black antenna wire rests outside of hanging bracket.

VII. WARRANTY POLICY

For help, please contact Replacement Remotes customer support of the store you purchased, or mail to:
Support@ceilingfanremote.com