

Ceiling Fan Wall Control Operation Instruction


Installation

1. Turning off the power

Before installation, use the pull chains to set the fan speed to HIGH and the light to ON. Ensure the power is OFF at the outlet box and wall switch location before proceeding with installation.

2. Installing the Wall Control

1. Remove the existing wall plate and the old switch from the wall outlet box.
2. Seat the cradle A into the wall plate. (Fig. 1)
3. Connect the black lead wires from the switch in the cradle A to the black wires in the switch box. Hot input wire to one of the cradle A switch leads. Power lead to the fan is connected to the remaining switch lead.
4. Connect the wall plate / cradle A assembly to the wall outlet box using the supplied hardware.
5. Snap the face plate cover onto the wall bracket.
6. Remote transmitter will be held in place with built in magnets.

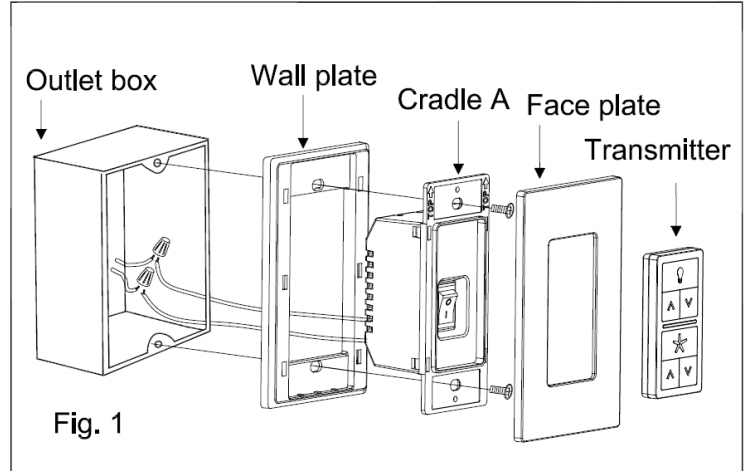


3. Turning on the power

Use the pull-chain switch on the fan to set the fan speed to the HIGH position before operation.

4. Pairing the Wall Control (Fig.2)


To pair the remote to your receiver, LONG PRESS the Fan and Light buttons Or Learn key together within three minutes of restoring power to the fan.

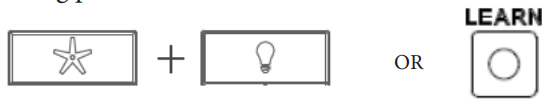

Remote Functions

Key Press
Light Functions

Function

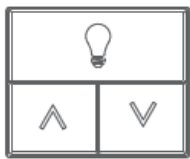

Light On/Off

Light Dimming Control




Light High

Light Low



Dimming Mode On/Off

Fan Functions

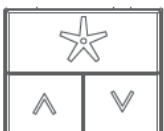


Fan On/Off

Fan Speed Control



Fan High

Fan Low

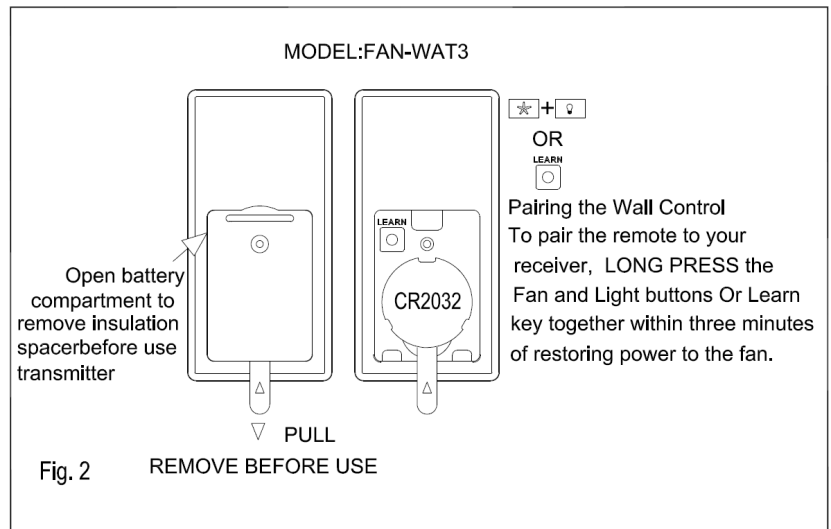

Long Press  +  Pair Function

Long Press  Fan Reverse
(For fans without a reverse switch ONLY)

Long Press  +  Fan Updraft
(For fans without a reverse switch ONLY)

Long Press  +  Fan Downdraft
(For fans without a reverse switch ONLY)

Long Press  +  Reset
(For WiFi enabled fans ONLY)